73111 Rev1:VC73311 MUK Rev 1 23/04/2009 09:56 Page 1

morphy richards®

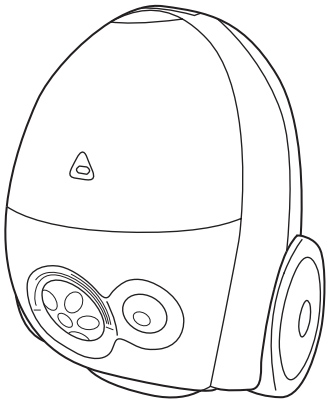

Essentials mini permanent bagged cylinder vacuum cleaner

Please read and keep these instructions

Getting the best from your new cleaner...

If your cleaner is not picking up as well as it should, please check

Dustbags

It is important to empty the permanent dustbag regularly. The bag should be shaken/brushed clean each time it is emptied and washed regularly to maintain performance. After washing, thoroughly air dry before re-use.

Filters

Whenever the bag is emptied, check the filters and clean if necessary.

Blockages

If performance is reduced and the dustbag and filters are clean, check the nozzle, tubes and hose for blockages.

CE 2year guarantee PARTS&LABOUR

VC73111 MUK Rev 1

If you have a problem or complaint, please call our dedicated UK based helpline before returning your product to the retailer from where it was purchased.

UK Helpline: 0844 871 0949
Replacement Parts: 0844 873 0715
Ireland Helpline: 1800 409 119

For details of other Morphy Richards products, plus replacement parts and accessories, please see our website: www.morphyrichards.com

IMPORTANT SAFETY INSTRUCTIONS

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance.

Please read these instructions before using the cleaner.

Location

- Do not use or keep this product outside.
- Do not store the appliance near hot surfaces eg. ovens or heating appliances.

Mains lead

- Do not allow the mains lead to become strained or run this appliance over it.
- If the electrical cable becomes damaged, the cable assembly must be replaced. Do not attempt this task yourself, contact the helpline number that is found at the bottom of the page.

Personal safety

- **WARNING: Keep loose clothing, hair, fingers etc. away from the nozzle whenever the cleaner is connected to the mains.**
- **WARNING: Only lift the product by the handle ❾.**
- **WARNING: Disconnect from the mains supply before carrying out any routine maintenance, such as cleaning any blockages, changing any filters or accessing the floor nozzle.**
- Always disconnect the appliance from the mains supply after use.
- Never use in the presence of explosive liquid or vapours.
- Never pick up inflammable or poisonous liquids such as petrol, copier toner or other volatile substances. Never pick up acids, asbestos or asbestos dust.
- Never touch the plug or cable with wet hands.
- Do not immerse cord, plug or cleaner in water or other liquid.
- The appliance must never be left running unsupervised.
- This appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Product safety

- Never use the appliance without the dust bag or filters being installed.
- Never use the appliance to vacuum hot ashes, broken glass, sharp objects or liquids.
- Use only Morphy Richards spare parts and accessories.
- Never modify the cleaner in any way.
- Repairs to electrical appliances are only to be undertaken by trained professionals. Unprofessional repairs can be dangerous for users.

Children

- Children do not understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.
- Children should be supervised to ensure that they do not play with the appliance, or stumble over the power cord.

ELECTRICAL REQUIREMENTS

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug should be removed and the appropriate one fitted.

If you cut off the plug and let go of the cable, it will rewind into the machine, therefore you must pull out a length of cable and secure it before cutting the plug off and re-fitting a new one.

WARNING: A damaged or severed mains cable fitted with a plug should never be connected to the mains supply. It must be destroyed, as a damaged cable becomes hazardous if connected to a power socket.

Should the fuse in the 13 amp plug require changing, a 13 amp BS1362 fuse must be fitted.

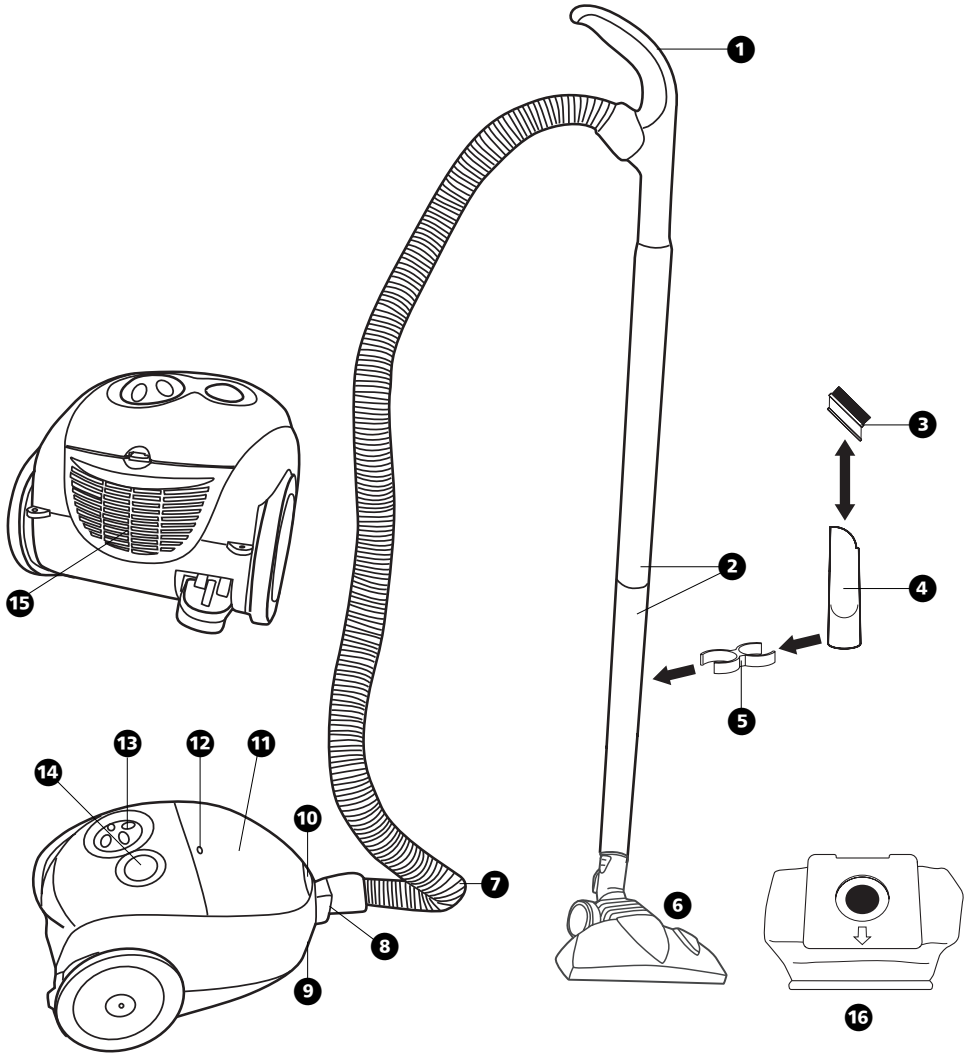

FEATURES

1. Hose handle with airflow control
2. Extension tubes
3. Brush attachment
4. Crevice tool
5. On tube tool storage
6. Combination floor nozzle
7. Hose
8. Hose inlet
9. Carrying handle
10. Dust bag compartment lid release
11. Dust bag compartment lid
12. Dust bag condition indicator
13. Power ON/OFF / Eco switch
14. Cable rewind switch
15. Exhaust filter cover
16. Permanent Dust bag

A

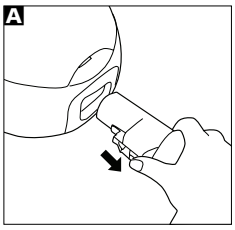

B

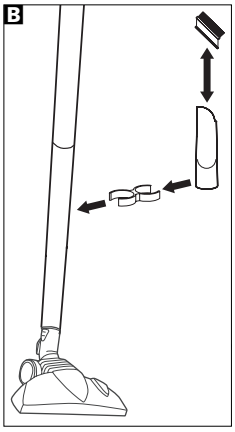

C

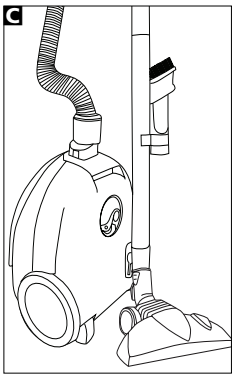

D

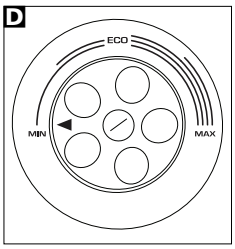

OPERATING THE APPLIANCE

1 Assemble the nozzle, tubes and hose as shown in 'Features'.

2 Pull out the cable to its full length and plug in to the mains supply.

3 Switch on by pressing the on/off Eco Switch.

OPERATION

Accessories

1 Fit the hose to the cleaner by inserting the hose end into the hose inlet ❽ A.

2 To remove, press the release button down on the hose and pull out.

3 Attach the extension tubes ❷ to the hose handle which features an airflow control which can be adjusted as required.

4 Attach the combination floor nozzle to the extension tubes. The floor nozzle ❻ has a pedal to switch between two positions:

- Brush up for carpets, rugs etc.
- Brush down for hard floors, tiles etc.

5 The other accessories include:

- Crevice tool ❹ for awkward places, behind radiators etc.
- Brush attachment ❸ for pelmets, delicate objects etc. This attaches to the crevice tool B.

Tools storage B

The crevice tool and brush can be stored on the tubes for added convenience.

Product storage C

When finished, you can store the vacuum cleaner as shown by inserting the hook on the floor nozzle into the slot on the cleaner body.

CONTROLS

Power - ON/OFF Eco Switch

NOTE: The Eco Switch allows you to turn down the power when cleaning more delicate items such as curtains and upholstery, saving energy and reducing running costs.

To switch the cleaner on, press the ON/OFF Eco switch ⓭ inwards. To switch off, press the on/off switch again.

The suction power can be adjusted using this switch again. Turn the switch to the desired level D.

Suction may also be varied with the fingertip control on the hose handle ❶:

Closed: **full suction**

Open: **reduced suction**

Automatic cable rewind

After use, unplug and press the cable rewind button ⓮ to retract the cable.

WARNING: When using the cable rewind, always hold the plug as the cable will rewind quickly.

DUSTBAG

Dustbag condition indicator ⓬

If the suction power decreases or if the dustbag condition indicator shows fully red, the dustbag must be emptied immediately and cleaned.

Check whether the suction hose, tube or nozzle are blocked.

- The dustbag indicator may occasionally show red during use - this is quite normal.

Removing and replacing the dustbag

To obtain the best results from your cleaner, be sure to empty and clean the dustbag regularly, otherwise the airflow and cleaning power of your cleaner will be reduced and you may damage your cleaner.

1 Lift the dust compartment lid ⓫.

2 Pull the dustbag retaining clip forward to release. Carefully lift the dustbag clear of the cleaner.

3 To refit the dustbag, first place the bottom end of the dustbag collar into the guide slot at the bottom of the dustbag compartment, then pull the collar forward until it locates into the securing clip **E**.

NOTE: The dustbag compartment lid will not close unless the dustbag is fitted correctly.

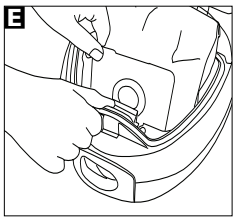

- Whenever the dustbag is emptied, check the filters and clean if necessary (see 'Filters' section).

- IMPORTANT: Always make sure the dustbag and filters are fitted before use. Failure to do so may result in damage to your product.

Cleaning the dustbag

1 Hold the dustbag over a dustbin and slide the clip from the bottom of the bag, emptying the contents into the dustbin **F**.

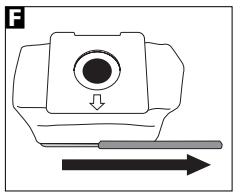

2 When emptied, it is recommended that the dustbag is turned inside out and brushed clean before replacing the slider onto the bottom of the bag and refitting the bag into the machine.

- IMPORTANT: Always ensure the clip is fully fitted to prevent leaks.

3 The dustbag should also be regularly washed in warm water (no detergent). **Allow the bag to thoroughly air dry before re-use**.

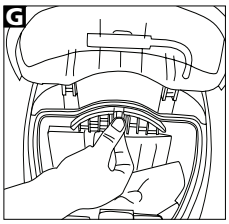

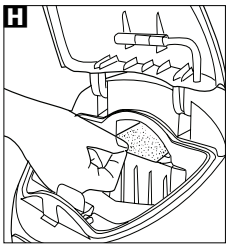

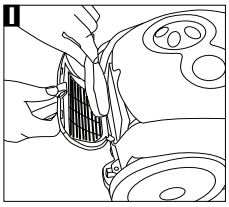

FILTERS

Motor filter

The motor filter must be checked and, if necessary, cleaned every time the bag is emptied. To clean, shake or brush the filter over a dust bin. The filter may also be washed but **must be thoroughly dry before re-use**.

The motor filter is found behind the dustbag. To remove the filter grill, press the centre tab and pull out G. Pull out the filter H. The grill must be replaced after the filter has been cleaned.

Exhaust filter

The exhaust filter is located behind the exhaust filter cover ⓯. To remove, unclip the cover and remove the filter I.

The exhaust filter should be cleaned every time the bag is emptied. To clean, shake or brush the filter over a dustbin. The filter may also be washed but **must be thoroughly dry before re-use**.

HINTS & TIPS

Cleaning and maintenance

Your cleaner is manufactured to withstand normal day-to-day use, but an occasional wipe over will help maintain its good looks. Abrasive cleaners should not be used.

Purchasing replacement filters and permanent dustbags

Use only Morphy Richards replacement dustbags and filters which can be purchased from specialist retailers or by calling the number below.

HELPLINE

If you have any difficulty with your appliance, do not hesitate to call us.

We are more likely to be able to help than the store from where you bought it.

Please have the following information ready to enable our staff to deal with your query quickly.

- Name of the product
- Model number as shown on the underside of the appliance.
- Serial number as shown on underside of the appliance.

UK Helpline **0844 871 0949**

Replacement Parts **0844 873 0715**

Ireland Helpline **1800 409 119**

WEBSITE

You may also contact us through our website, or visit the site to browse and purchase appliances, spare parts and accessories from the extensive Morphy Richards range.

www.morphyrichards.com

For electrical products sold within the European Community. At the end of the electrical products useful life, it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

YOUR TWO YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown.

You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If you suspect a fault, follow the simple checks detailed below before retrying the appliance or calling the helpline.

- Check the filters for blockages.
- Check the tools / tubes for blockages.
- Check the plug is firmly in the socket.
- Check the socket is working by trying another appliance.
- Check the fuse in the plug.

If, for any reason, this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore, it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

EXCLUSIONS

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.

2 The appliance has been used on a voltage supply other than that stamped on the products.

3 Repairs have been attempted by persons other than our service staff (or authorised dealer).

4 The appliance has been used for hire purposes or non domestic use.

5 The appliance is second hand.

6 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.

7 The guarantee excludes consumables such as bags and filters.

- This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.
- This guarantee is valid in the UK and Ireland only.

Morphy Richards products are intended for household use only.

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

morphy richards

The After Sales Division
Morphy Richards Ltd
Mexborough, South Yorkshire,
England, S64 8AJ

Helplines (office hours)
UK 0844 871 0949
Spare Parts 0844 873 0715
Republic of Ireland 1800 409 119

VC73111 MUK Rev 1 04/09

For details of other Morphy Richards products, plus replacement parts and accessories, please see our website: www.morphyrichards.com